




## Installation strap placement on Norwood windows and doors

Installation straps should be spaced 6 inches from the corners of the top, bottom (on windows only) and sides of the window and door and equally spaced in the center. Maximum spacing is not to exceed 24".

On Double and single hung an installation strap must be installed at the meet rail in addition to the above placement, see figure 1

See Figure 2 for Installation strap spacing

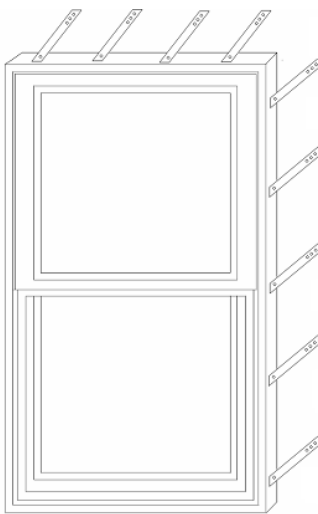

6" from top and side of the window or door to the first strap

On double and single hung windows strap must be at the center.

6" from bottom of the window or door to the first strap.

Figure 1

### INSTALLATION STRAP PLACEMENT

# OF CLIPS	First installation strap 6 inches from corners		ACTUAL measurements between straps for minimum width	ACTUAL measurements between straps for Maximum width
	FROM (MIN)	UP TO (MAX)		
2	0	35 15/16	0.00	23.94
3	36	55 15/16	12.00	21.97
4	56	75 15/16	14.67	21.31
5	76	95 15/16	16.00	20.98
6	96	115 15/16	16.80	20.79
7	116	135 15/16	17.33	20.66
8	136	155 15/16	17.71	20.56
9	156	175 15/16	18.00	20.49
10	176	ALL	18.22	-

Figure 2